

## (CD) Glasses/MP3 Cleaner

Scratch resistant, microfibre pads for cleaning glasses, MP3 players, mobile phone screens and slim hand held devices. No cleaning solution required. Key ring fixing. Instructions: Make sure there are no particles of grit on lens, screen or cleaning cushions. Slide cushions over device or lens and squeeze gently, moving pads over the surface.



### Additional Information

- A scratch resistant microfibre lens and MP3 cleaner pad.
- Suitable for cleaning glasses, MP3 players, mobile phone screens and slim hand held devices.
- No cleaning solution required with this handy lens and MP3 cleaner.
- Simply slide the cushion over the device or lens and squeeze gently moving the pads over the surface.
- Sold in multiples of 24.

<http://kamasa.co.uk/product/55929>

